

RYNO[®] BED → INFILL PANEL FIXING



These instructions apply only when fixing to a concrete floor with no obstructions (e.g. under floor heating, cables, plumbing, etc.). When fixing to any other surface, or with obstructions, please contact your Pineapple representative for further advice

REQUIRED ITEMS

- Infill piece
(only provided with floor fixed version)
- 5x security screws
(only provided with floor fixed version)
- Wall baton
- Wall hardware for baton fitting
- Handheld powerdrill
- Pencil

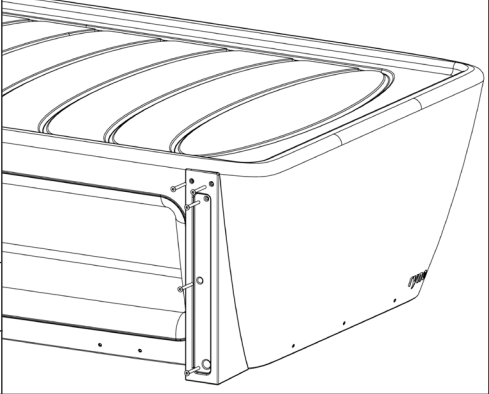
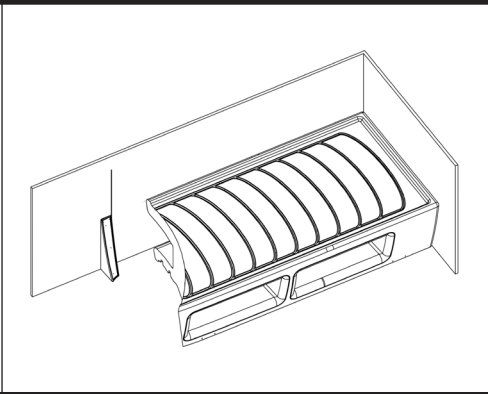
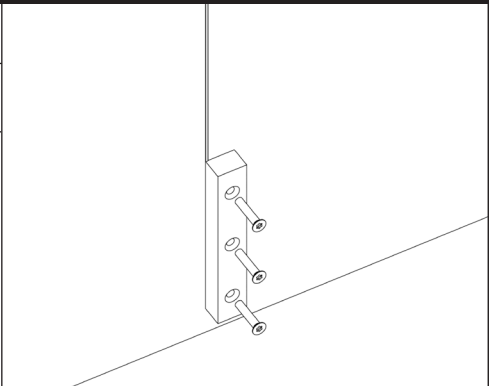


+44 (0)1622 237830

sales@pineapplecontracts.com

Pineapple

RYNO[®] BED → INFILL PANEL FIXING

01	Ensure correct infill piece has been selected to fit the correct side of the bed and attach infill piece to bed using security screws provided		
	Place bed in desired location and mark a guide line for wooden wall baton	02	
03	Secure to wall using appropriate wall hardware		



+44 (0)1622 237830

sales@pineapplecontracts.com

Pineapple

DISCLAIMER

	<ul style="list-style-type: none">→ Ensure the proper and adequate hardware is used to secure furniture→ Ensure fixings are appropriate for the anchoring material→ Use fixings of an appropriate strength and consider using security fixings in challenging environments→ Consider using high strength thread-locker on fixings in challenging environments→ Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary→ Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result in inadequate product installation and void of warranty→ Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user



+44 (0)1622 237830

sales@pineapplecontracts.com

Pineapple